

RAKL RACK MOUNT KIT EXTRUSION INSTALLATION PROCEDURE FOR LL2A

1. Unplug power from the LL2A.
1. Remove the knobs using the provided 1.5mm Allan key to loosen the set screw.
2. Remove the front panel socket head 4-40 screws with the provided 3/32" Allan key.
3. Remove the front panel.
4. Remove the plastic frame and save for if you want the unit standalone at a later date.
8. The rack kit RAKL extrusion replaces the plastic frame piece. So bring the front panel to the front of the rack kit RAKL extrusion.
9. Line the holes up where the socket head 4-40 screws go and with the front panel placed on the front of the rack kit RAKL extrusion. Carefully screw the 4-40 socket heads back in using the preferably longer socket head 4-40 s socket heads that came with the rack kit (but not essential).
12. Replace knobs and tighten set screws. You're done!

The little square pieces of metal included (pic below) are for the edges of your rack, so the rack screws sit flush with the RAKL.
Blank panels (not included) are available as part # BLP.

